

基本型號	濕度輸出	住房	溫度範圍
HT3 (3% RH 發射器) HT2 (2% RH 發射器) HD3 (3% RH 發射器, 附 LCD) HD2 (2% RH 發射器, 附 LCD)	C (4~20mA 輸出) V (0~10Vdc 輸出) M (RS485 附 Modbus (僅限 RH+Temp. 型號))	2 (牆壁安裝) 3 (管路安裝 12" 探頭) 7 (遠端感知器) 8 (室外空氣) K (帶 NTC 20k 感測器)	0 (無溫度輸出) 1 (帶溫度感測器 0-50C (0-100 透過浸入開關)) P (帶 Pt 100 感測器) Q (帶 Pt 1000 感測器)

Model	Type	Humidity Output	Housing	Temperature Range
HT3C21	3% RH transmitter	4~20mA	Wall mount	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT3C31	3% RH transmitter	4~20mA	Duct mount 12" probe	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT3C71	3% RH transmitter	4~20mA	Remote Sensor	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT3C81	3% RH transmitter	4~20mA	Outside Air	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT3V21	3% RH transmitter	0~10V	Wall mount	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT3V31	3% RH transmitter	0~10V	Duct mount 12" probe	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT3V71	3% RH transmitter	0~10V	Remote Sensor	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT3V81	3% RH transmitter	0~10V	Outside Air	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT3M21	3% RH transmitter	RS485 with Modbus	Wall mount	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT3M31	3% RH transmitter	RS485 with Modbus	Duct mount 12" probe	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT2C21	2% RH transmitter	4~20mA	Wall mount	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT2C31	2% RH transmitter	4~20mA	Duct mount 12" probe	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT2C71	2% RH transmitter	4~20mA	Remote Sensor	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT2C81	2% RH transmitter	4~20mA	Outside Air	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT2V21	2% RH transmitter	0~10V	Wall mount	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT2V31	2% RH transmitter	0~10V	Duct mount 12" probe	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT2V71	2% RH transmitter	0~10V	Remote Sensor	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT2V81	2% RH transmitter	0~10V	Outside Air	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT2M21	2% RH transmitter	RS485 with Modbus	Wall mount	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HT2M31	2% RH transmitter	RS485 with Modbus	Duct mount 12" probe	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD3C21	3% RH transmitter w/ LCD	4~20mA	Wall mount	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD3C31	3% RH transmitter w/ LCD	4~20mA	Duct mount 12" probe	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD3C71	3% RH transmitter w/ LCD	4~20mA	Remote Sensor	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD3C81	3% RH transmitter w/ LCD	4~20mA	Outside Air	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD3V21	3% RH transmitter w/ LCD	0~10V	Wall mount	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD3V31	3% RH transmitter w/ LCD	0~10V	Duct mount 12" probe	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD3V71	3% RH transmitter w/ LCD	0~10V	Remote Sensor	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD3V81	3% RH transmitter w/ LCD	0~10V	Outside Air	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD3M21	3% RH transmitter w/ LCD	RS485 with Modbus	Wall mount	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD3M31	3% RH transmitter w/ LCD	RS485 with Modbus	Duct mount 12" probe	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD2C21	2% RH transmitter w/ LCD	4~20mA	Wall mount	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD2C31	2% RH transmitter w/ LCD	4~20mA	Duct mount 12" probe	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD2C71	2% RH transmitter w/ LCD	4~20mA	Remote Sensor	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD2C81	2% RH transmitter w/ LCD	4~20mA	Outside Air	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD2V21	2% RH transmitter w/ LCD	0~10V	Wall mount	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD2V31	2% RH transmitter w/ LCD	0~10V	Duct mount 12" probe	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD2V71	2% RH transmitter w/ LCD	0~10V	Remote Sensor	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD2V81	2% RH transmitter w/ LCD	0~10V	Outside Air	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD2M21	2% RH transmitter w/ LCD	RS485 with Modbus	Wall mount	w/temp. Xmitter 0-50C (0-100 by dip sw.)
HD2M31	2% RH transmitter w/ LCD	RS485 with Modbus	Duct mount 12" probe	w/temp. Xmitter 0-50C (0-100 by dip sw.)